


KOB

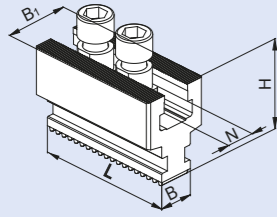

Kombi-Grundbacken für Backenschnellwechsel

- Modulgeradzahnung System SMW-AUTOBLOK für Spitzverzahnung Zoll
- Inklusive Nutensteine und Zylinderschrauben ISO 4762 – 12.9

Typ	Id.-Nr.	B	B ₁	H	L	N	Spitzverzahnung	kg / Satz	SMW-AUTOBLOK
KOB 200-1	081323	22	45	56	85	17	1/16" x 90°	2.67	KNCS-N 210 KNCS-N 225 HG-N 210
KOB 250-1	081324	26	45	59.5	104	17	1/16" x 90°	3.63	KNCS-N 260 HG-N 260 KNCS-N 275
KOB 250-2	081325	26	50	67	104	21	1/16" x 90°	4.36	KNCS-N 260 HG-N 260 KNCS-N 275
KOB 315-2	081327	32	50	72	115	21	1/16" x 90°	5.46	KNCS-N 325 HG-N 315 KNCS-N 340
KOB 400-2	081329	32	60	76	125	25.5	3/32" x 90°	7.04	KNCS-N 400 HG-N 400 KNCS-N 315 HG-N 315
KOB 500-2	006474	45	64	84	160	25.5	3/32" x 90°	11.90	KNCS-N 500 HG-N 500 KNCS-N 630

Samchully	Röhms	Schunk
	DURO-NCES 200 DURO-A RC 215 DURO-NCSE 215	ROTA THW 210 ROTA THW plus 215 ROTA-G 200 THW 210R ROTA NCW 225 ROTA THW vario 215
	DURO-NCES 250 DURO-A RC 260 DURO-NCSE 260	ROTA-THW 250 ROTA THW plus 260 ROTA-G 250 THW 250/265-R ROTA NCW 265
	DURO-NCES 250 DURO-A RC 260 DURO-NCSE 260	ROTA-THW 250 ROTA THW plus 260 ROTA-G 250 THW 250/265-R ROTA NCW 265
	DURO-NCES 315 DURO-A RC 315 DURO-NCSE 315	ROTA-THW 315 ROTA THW plus 315 ROTA-G 315 ROTA NCW 315 THW 315-R
	DURO-NCES 400 DURO-A RC 400 DURO-NCSE 400	ROTA THW 400 THW 400-R ROTA-G 400
	DURO-A RC 500/630 DURO-NCSE 500/630	ROTA THW 500 THW 500-R ROTA-G 500 ROTA THW 630 THW 630-R ROTA THW 800